


## G4-957 Installation Instructions


**PLEASE READ INSTRUCTIONS ALL THE WAY THROUGH BEFORE STARING INSTALLATION!**

Unless you know these few simple steps, it can be very challenging to install these bulbs in your overhead fixtures. After several unsuccessful attempts and two screaming rotator cuffs I came up with this approach. It saved me a lot of time and effort. Let me know how it goes...


### Step one:

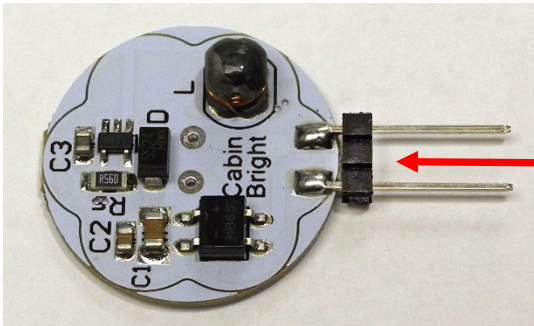

**REMOVE** black plastic spacer on pins so the bulb looks like the picture on the right.

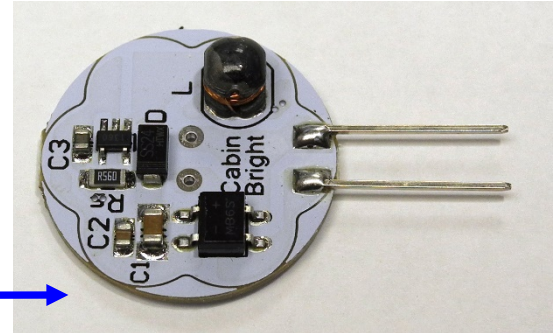


### Step two:

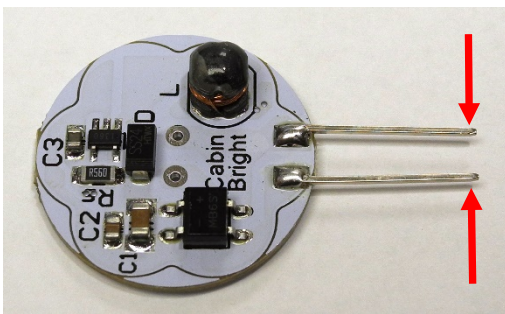


**GENTLY** squeeze the ends of the wire pins toward each other so they no longer parallel.

### Step three:

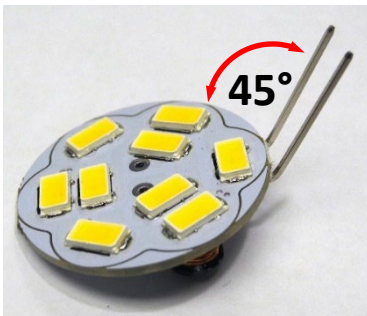

**BEND** the wire pins **TOWARD** the surface of the bulb at a 45° angle. This will allow you to easily insert the bulb into the fixture. Then go ahead and insert your new LED bulb into the fixture. Note how much the wire pins stick out **AFTER** the bulb is **FULLY** inserted in the ceiling puck.

### Step four:

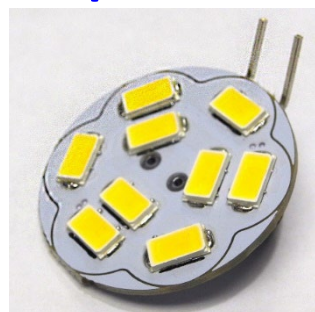

**CUT** the amount off the end of the pins that caused the bulb to stick out of your fixture. Now you will be able to reinsert the bulb into the fixture and have it flush against the socket. **PUSH** the bulb straight up in the middle of the fixture. This will center the bulb. Put the lens back on.

Please take your time and enjoy the process. When removing the halogen JC10 or JC20 bulbs please use a clean rag or paper towel. You don't want to get your body oils on the glass bulbs as they will burn out if voltage is reapplied. If the original bulbs are difficult to remove, gently rock them from side to side. That should do it. Any questions? Email: [joe@cabinbright.com](mailto:joe@cabinbright.com); 513-899-9152 phone.